

Cantilever Capacity Chart



Loading table for columns (LBS)						
Column 9.7"	Column height	Arm length				
		36"	40"	48"	60"	72"
	8'	14300	14300	14300	14300	13640
12'	12980	12980	12980	11880	9900	
16'	12760	12760	11660	9460	7700	
20'	12320	11660	9680	7700	6600	

Loading table for columns (LBS)						
Column 11.7"	Column height	Arm length				
		36"	40"	48"	60"	72"
	8'	20000	20000	20000	20000	19100
12'	18170	18170	18170	16630	13860	
16'	17860	17860	16320	13240	10780	
20'	17250	16320	13550	10780	9240	
24'	10450	9410	7830	6270	5240	
28'	9100	8180	6820	5460	4550	

Loading table for arms (LBS)				
Arm Specs	Arm length			
	36"	40"	48"	60"
4"	3300	3300	2640	---
5"	3960	3960	3960	3260
5.5"	3960	3960	3960	3960

